

SAVE-T[®] GUARD[™]

Installation Guide

Note: Before installing the gate, ensure that all items are included with shipment. If any items were damaged during shipment, please report the problem to the shipping company immediately.


Items Included: Security Gate, Bearing Washers (1 for Single, 2 for Double), "L" Brackets (1 for Single, 2 for Double), Locking Bar

Tools Required: Drill, 5/8" Masonry Drill Bit, 3/8" Masonry or Wood Drill Bit, Marking Pencil, Ratchet/Wrench

Before installing your Save-T Guard, determine whether you will be mounting it in the doorway, or on the outside wall. Optional Overhead Door Mount extension brackets are available.

Caution: Keep hands away from pinch points – Do not stand gate on its wheel without being properly attached to the mounting surface.

1. Mark the center of hole on the floor two inches away from the wall.
2. Drill a 5/8" x 2" deep hole into the floor to accommodate the bottom mounting pin. Insert the pin through the washer and into the floor.
3. With the gate inserted into the drilled hole, extend the gate. Install the "L" bracket. Recommended install for "L" bracket is as follows:
 - Wood: Use 5/16" x 2" lag bolts
 - Steel: Drill and tap for 5/16" x 2" bolts
 - Brick or Concrete: 5/16" x 3" lag bolts in 3/8" holes with wood or lead anchors
4. Single Gates Only: Install the included locking bar. Follow the same mounting parameters as mentioned in Step 3.
5. If installing a double gate, repeat steps 1 through 3 with additional gate.
6. Double Gate Only: Stretch both gates to the center of the door opening and drill a 5/8" hole for the center locking pin. Use an optional pad lock for extra security.

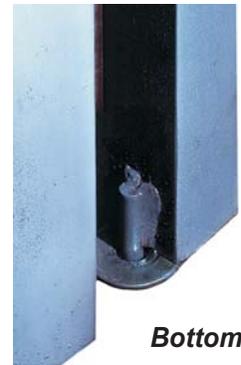

Bottom Pin



"L" Bracket



Double Gate Drop Pin

