





Chase Doors

World's Leading Manufacturer of Traffic Doors

Cincinnati Ohio, and Redmond Oregon • Phone Toll Free: 1-800-543-4455 • Fax: 1-800-285-0126 • www.chasedoors.com

Canebolt Hole Position On Header

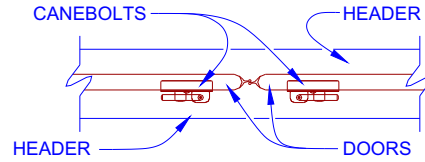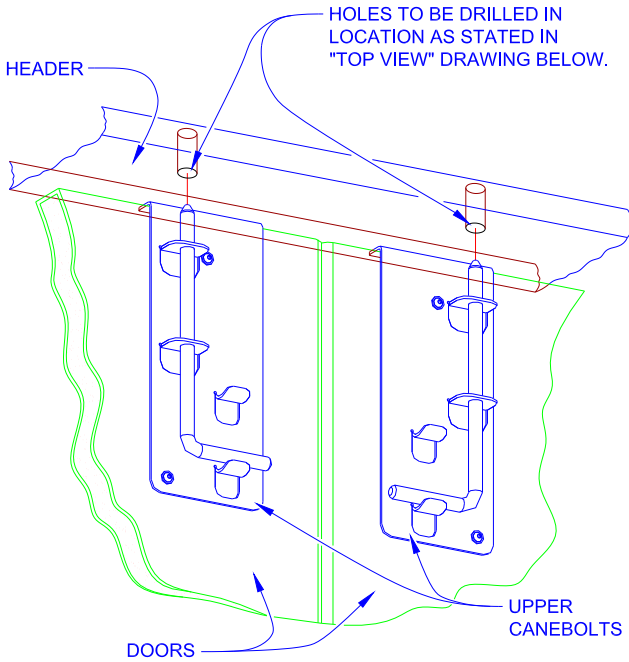

CLOSED POSITION

LOCATING UPPER CANEBOLT HOLES IN HEADER

1. LOCATE CENTER LINE OF HEADER.
2. FROM CENTER LINE ON HEADER, MEASURE OUT (CANEBOLT SIDE) 1-3/4".
3. FROM INSIDE EDGE OF JAMB, MEASURE OUT (TOWARD THE CENTER) 28".

